


Installation Mechanism

The method of installation different according to the status of the consultant, but the method of installation in Generally is

Step 1

Put the torpedo water level in a straight manner to ensure the installation process and the absence of inclinations

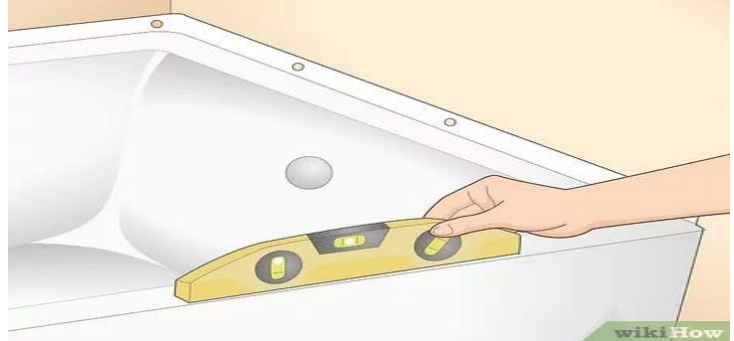


Step 2

Put the bathtub on the bricks after completing the balancing and insulation work and connecting the drain



Step 3

Apply the transparent Antibacterial silicone on all sides of that bathtub for final installation work

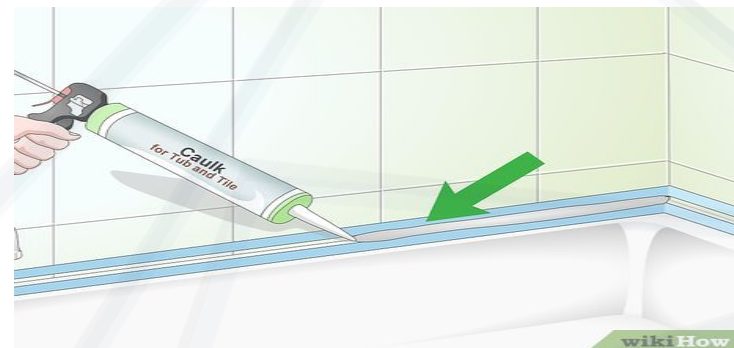

Step 4

Make sure to brush the excess silicone over all of the spaces and hold it for 6 hours to ensure no water seepage occurs

